

blueLOGiC® hands-free kit

BT-VW01

**for VW RNS510 and Skoda Columbus navigation
systems, VW RCD510 radio systems
or vehicles with FIS display**

Bluetooth®-hands-free phone kit fully integrated in the vehicle infotainment



Contents

1. Prior to installation

- 1.1. Delivery contents
- 1.2. Checking the compatibility of vehicle and accessories

2. Installation

- 2.1. Place of installation
- 2.2. Removal of head unit and connections
- 2.3. Activation of the interface

3. Interface operation

- 3.1. Pairing the blueLOGiC® interface with a mobile phone
- 3.2. Loading of phone book
- 3.3. Phone functions through head-unit
- 3.4. Phone and additional functions through steering-wheel and FIS
 - 3.4.1. Phone book
 - 3.4.2. Direct dial
 - 3.4.3. SMS - reading and writing
 - 3.4.4. A2DP - audio streaming
 - 3.4.5. MFA+ - vehicle information
 - 3.4.6. MFA PDC - distance information of the park distance control
 - 3.4.7. Settings - of the blueLOGiC® interface
 - 3.4.8. Version - of the blueLOGiC® interface
- 3.5. Setup, factory defaults and update function through call codes

4. Specifications

5. Technical support

Information

Changes of the vehicle software can cause malfunctions of the interface. We offer free software-updates for interfaces for one year after purchase. To receive a free update, the interface must be sent in at own cost. Labor cost for and other expenses involved with the software-updates will not be refunded.


Product features

- Integration in and controls through the telephone port of the factory infotainment
- Updatable Parrot chipset with best audio quality and high phone compatibility
- Automatic radio mute
- Caller audio through vehicle sound-system
- External microphone with amplification adjustment through infotainment
- A2DP audio streaming (requirement: MFA-display in vehicle; mobile phone supports function).
- up to 10 mobile phones can be paired simultaneously
- Use of factory/vehicle buttons to control phone functions
- Mobile phone book integration (about 1000 call numbers)
- Audio adjustment and settings through vehicle infotainment
- SMS reading and writing if supported by mobile phone
- Multi-language support of FIS display and automatic vehicle language detection
- MFA+ display features (requirement is an FIS display)

1. Prior to installation

Read the manual prior to installation. Technical knowledge is necessary for installation. The place of installation must be free of moisture and away from heat sources.

1.1. Delivery contents

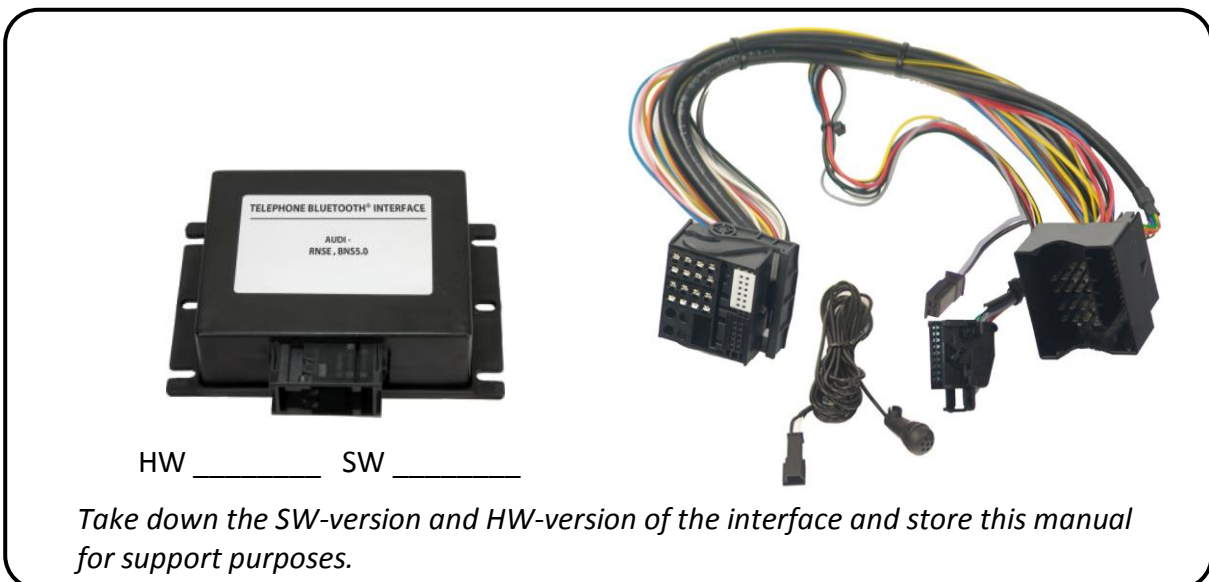

1.2. Checking the compatibility of vehicle and accessories

Requirements

<i>Vehicle</i>	VW, Skoda, Seat
<i>Navigation</i>	RCD510 radio system RNS510 navigation system Columbus navigation system Trinax Navigationssystem Other navigation-/radio systems with FIS display

Limitations

<i>Factory telephone kit</i>	must be removed if installed
<i>FIS</i>	must be red colored (white is not supported yet)
<i>A2DP</i>	Only works on vehicles with MFA-display in the instruments

2. Installation

Switch off ignition and disconnect the vehicle's battery! The interface needs a permanent 12V source. If according to factory rules disconnecting the battery is to be avoided, it is usually sufficient to put the vehicle in sleep-mode. In case the sleep-mode does not show success, disconnect the battery with a resistor lead.

If power source is not taken directly from the battery, the connection has to be checked for being start-up proven and permanent.

2.1. Place of installation

The interface is installed on the backside of the navigation/radio unit which must be removed for installation of the interface.

2.2. Removal of head unit and connections

Unlock the navigation/radio unit and remove it from the dashboard.



Remove the vehicle harness' Quadlock socket from the head unit. Plug the Quadlock socket of the interface harness into the head unit and the Quadlock socket of the vehicle harness into the Quadlock connector of the interface harness.



Install the microphone close to the driver. Connect the microphones 3 Pin AMP jack to the 3 Pin AMP jack bush of the blueLOGiC® harness.

2.3. Activation of the interface

After first installation the vehicle must go into sleep-mode in order to recognize the newly attached hardware. After re-connecting the battery, lock the vehicle and wait for 5 -10 minutes.

3. Interface operation

On vehicles with RCD510 or RNS510 the head-unit's phone menu can be used to control the blueLOGiC® interface. On vehicles with FIS display, it is possible to control the blueLOGiC® interface through the steering-wheel buttons and the FIS' phone menu. If a vehicle is equipped with head-unit and FIS, both controlling options are available. Controls by FIS is offering more options in comparison to controls by head-unit. Some settings can be changed by dialing setting codes which is especially needed in vehicles with retrofitted RCD510/RNS510 without FIS display.

3.1. Pairing the blueLOGiC® interface with a mobile phone

Up to 10 mobile phones can simultaneously be paired with the blueLOGiC® interface. If a 11th phone is paired, the oldest entry is automatically deleted. In some cases, it becomes necessary to put the vehicle in sleep mode to enable correct function of the 11th phone. For pairing, enable the pairing mode of the mobile phone (see manual of the mobile phone). Search with the mobile phone for „blueLOGiC“ or „CK5050N“ and connect with activation code „1234“. Some mobile phones try to connect to the blueLOGiC® interface with another function as "hands free". Check this attitude and switch the adjustment to "hands free" if necessary (see manual of the mobile phone).

If a mobile phone had been paired to the blueLOGiC® interface (requirement is an occurred pairing with a mobile phone, see above), a connection will be automatically established as soon as the mobile phone is in reach. If multiple paired mobile phones are simultaneously in reach, the blueLOGiC® interface will be connected to the first phone.

If you have connection problems between mobile phone and the blueLOGIC, first check at the parrot website whether an update for the parrot chip is available. The part number of the parrot chip can be found in the specifications at the end of the manual.

3.2. Loading of phone book

After each establishment of connection to the mobile phone, the phone book of the mobile phone will be loaded to the vehicle infotainment.

Depending on the mobile phone either it will be loaded from the phone's memory or the SIM card. This process can take a few minutes. **If the phone book is no or not completely loaded, it might be necessary to copy the contacts from the SIM-card to the mobile phone memory!**

Some mobile phones do not automatically load the phone book to the infotainment, but the sending must be manually initiated (the procedure varies depending on the mobile phone, z.B. "send phone book to Bluetooth").

The manual procedure must be repeated for refreshment if the mobile phone's contacts have been edited.

The memory of blueLOGIC® interface can save about 1000 call numbers.


3.3. Phone functions through head-unit

The interface enables the phone bus of the factory navigation system. Therefore in principal, the operation through the head-unit is analogue as described in the manual of the navigation/radio system.



3.4. Phone and additional functions through steering-wheel and FIS

Using the menu button of the steering-wheel, the FIS display switches through different menus (radio, nav, phone,...). With installed blueLOGIC®, the phone menu shows the blueLOGIC® startup screen.

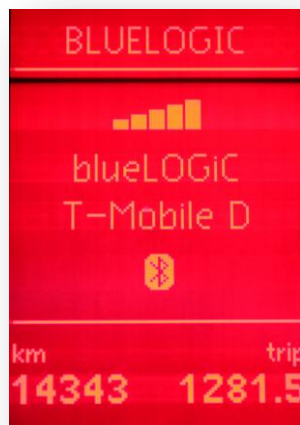

The mobile phone's signal strength is shown by the bars on top of the startup screen. The blueLOGIC® main menu is opened by up or down key of the steering-wheel while the startup screen is displayed.



The options of the blueLOGIC® main menu at FIS are described in the chapters 3.3.1. thru 3.3.8..

3.4.1. Phone book

The phone book entries of the connected phone are available in the phone book menu. Contacts are displayed once for every



phone number in a fixed order (office, mobile, home,...). Once an entry is selected, it will be in single display with dialing option.



3.4.2. Direct dial

The mobile phone's direct dial numbers are available in the menu items direct dial.



3.4.3. SMS - reading and writing

If supported by the mobile phone, the blueLOGiC® interface supports reading and writing SMS under menu item SMS (if supported by mobile phone). There are some standard template answers available.

3.4.4. A2DP - audio streaming

When the blueLOGiC® interface AD2P function is started, it is possible to listen to music files which are played by the mobile phone on the factory sound system. The available options to control the play functions of the mobile phone depend very much on the mobile phone, for example iPhones® do not support any track skipping. Full functions are starting and stopping the playback, next track and previous track. The functions can be executed by selecting the corresponding menu entry. Playback is automatically stopped during call activity but possibly needs to be manually restarted (depend on mobile phone).



Note: A2DP only works on vehicles with MFA-display in the instruments

3.4.5. MFA+ - vehicle information

The MFA+ function shows additional detailed condition information.



3.4.6. MFA PDC - distance information of park distance control

This function shows the distance data of the factory PDC.



Upper 4 values = front sensors

Lower 4 values = rear sensors

3.4.7. Settings - of the blueLOGiC® interface

In the settings menu it is possible to make volume adjustments, manually adjust the language, change unit scales and load the interface's factory values.0



3.4.8. Version of the blueLOGiC® interface

Show blueLOGiC® interface version information.



3.5. Setup, factory defaults and update function through call codes


Settings of the blueLOGiC® interface can also be changed by dialing setting codes in the vehicle telephone mode. Caller audio volume, Ringing tone volume and microphone sensitivity can be adjusted separately. The interface can be reset to factory defaults and updates of the Parrot chipset can be initiated. To execute a function, just dial the corresponding code from the below table like a phone number and confirm with "pick-up".

Function	Code no.	Min	Max
Microphone sensitivity	+001xx	01	15
Caller audio volume	+0021xx	01	15
Ringing tone volume	+0022xx	01	15
Factory defaults	+009		
Parrot Update Mode	+000		

To the codes for volume and sensitivity it is necessary to add two digits for the desired value (01 min. to 15 max.). For example dial “+002112” to set the caller audio volume to level 12. After dialing a code, the navigation will confirm with “call failed”. System updates of the Parrot chipset are possible through Bluetooth® via PC.

4. Specifications

Integrated Bluetooth® Chip	Parrot CK5050new
Operation voltage	10.5 – 14.8V DC
Stand-by power drain	<1mA
Operation power drain	120mA
Power consumption	1.8W
Temperature range	-30°C to +80°C
Weight	95g
Dimensions (box only) B x H x T	106 x 30 x 71 mm

CE  12V DC

5. Technical Support

Caraudio-Systems Vertriebs GmbH
manufacturer/distribution
Rheinhorststr. 22
D-67071 Ludwigshafen am Rhein

NavLinkz GmbH
corporate sales/tech support
Eurotec-Ring 45
D-47445 Moers

phone +49 180 3 907050
email support@caraudio-systems.de

Legal disclaimer: Mentioned company- and trademarks, as well as product names/codes are registered trademarks ® of their corresponding legal owners.